


Parts List

When installed correctly your frost free standpipe can be fully serviced in situ without the need to remove it from the ground. To facilitate this there is a standard parts kit available which contains all the parts you may require. If you require any other parts on the list please contact us for availability.

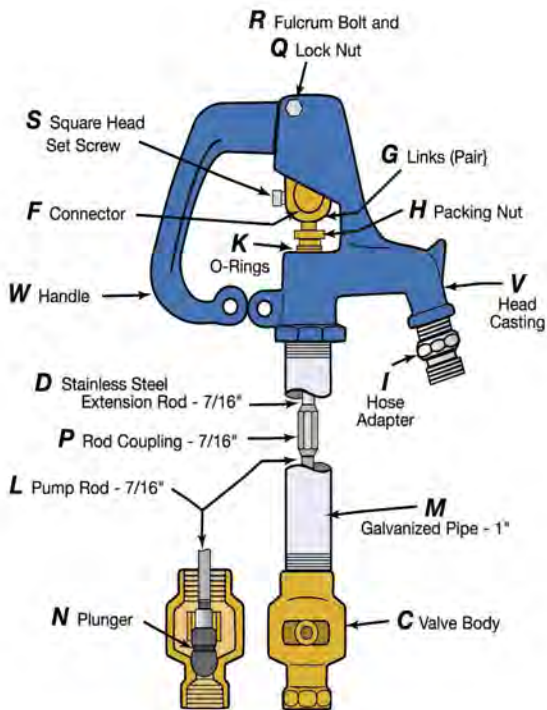

Diag. 2 Parts List

Premier Lead Free Standpipe Parts List

Ref	Name of part
A	Parts Kit
B	Head Complete
V	Head
W	Handle
C	Valve Body
D	Stainless Steel Extension Rod
F*	Brass Connector
G*	Brass Links
H*	Brass Packing Nut
I	aluminium Hose Adapter
K*	Buna-N "O" Rings
L	Pump Rod
M	Pipe Casing
N*	plunger (one piece)
P	Rod Coupling
Q*	Stainless Steel Lock Nut
R*	Fulcrum Bolt Stainless Steel
S*	Square Head Set Screw St. Steel

*Included in Parts Kit

Other parts please contact us for availability

Adjustment

If the standpipe will not shut off completely, the plunger in the bottom of the standpipe can be lowered by raising the point of contact of the square head set screw on the stainless steel rod. Item S in diag. 2